


Working With AIR-SCENT® Odyssey™ Dispensers

Removing Cover When Dispenser is not Mounted

[Caution: To avoid accidental spillage, be sure there is no liquid refill in dispenser before handling.]

- 1) Hold dispenser back-plate in one hand and firmly grip the bottom of the unit cover with the other. Squeeze bottom of cover and pull outward and down. Once cover is detached from top, pull out from the bottom and remove cover completely.

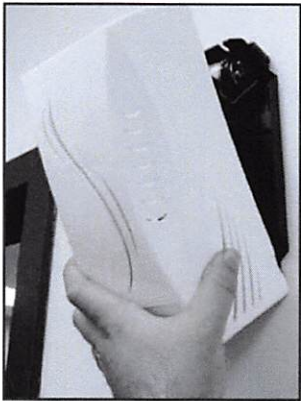

Removing Cover When Dispenser is Mounted on Wall

- 1) Firmly grip the bottom of the unit cover. Squeeze bottom of cover and pull outward and down. Once cover is detached from top, pull out from the bottom and remove cover completely.

Replacing the Cover

- 1) Place cover squarely over back plate. Push on bottom of cover first, allowing cover tabs to lock in to place. Then firmly place the top portion of the cover in place until it is secured.

Mounting Dispensers to the Wall

- 1) Remove cover from dispenser as described above.
- 2) Slide battery assembly downward to expose mounting holes as pictured.
- 3) Choose a location. Typically, in rooms with 8' ceilings, mount dispenser 5"-6" from ceiling as shown. For higher ceilings, mount dispensers approximately 7 1/2' from the floor (measured to top of dispenser).

- 4) Position dispenser back plate on wall in desired location. Being sure back plate is plumb and level, mark wall through holes in dispenser with pencil. Note: Use uppermost hole and leveling slot as shown (circled). 5) Drill 3/16", 15/64" or 1/4" holes into wall at your marks (Hole size is determined by type of wall anchor; see next section).

